

Maxey Village Hall Sound System Instructions

The controls for the sound system are located in and around the black cabinet on the left-hand side of the stage.

1	Switch on sound system main switch on the wall at the back of the cabinet	
USING YOUR PHONE ETC., EITHER BY BLUETOOTH OR PLUG:		
2	To use Bluetooth to connect your phone or other device, look for the DENON receiver. It should be on with a green flashing light. To pair with your phone press the "pair" button until green light flashes faster. Ensure Bluetooth is enabled on your phone and pair with DN200BR and connect your phone	
3	Set selector switch on top of cabinet to 4 "Bluetooth" and open up some music on your phone and it should play through the speakers. There is a volume control on the same selector switch.	
4	If you have a jack plug or a jack plug adaptor for your phone or other device, then this can be used instead of Bluetooth. The selector switch on top of cabinet must be set to 3 "Line in"	

Maxey Village Hall Sound System Instructions

Using CD DVD PLAYER:

- 5 Remember to do step 1 - turn on wall power switch (SOUND). Switch on the SONY DVD player. Use the open/close button to inset your disc.



- 6 Adjust Sector switch to 2 "DVD" Press play. Volume can be adjusted accordingly



Maxey Village Hall Sound System Instructions

MICROPHONES:

7 You will need to access the microphones from the locked box. A key will be issued to you. Spare batteries are also available in the box.



8 Remember to do step 1 - turn on wall power switch (SOUND). Switch on the Wireless Microphone Receiver. You will notice that there are two channel frequencies 9 & 12.



9 There are two microphones set to the 9 and 12 frequencies – if you are using only one then either can be used. Select a microphone and switch on and test and you should have sound coming out of the speakers. When using the microphone, it will override any other sound coming through the speakers.



Remember after use of any of the sound equipment, please switch off and return microphones to box and relock the box. The key should be posted along with door keys in the letter box outside.