

KEY SAFE INSTRUCTIONS

TO OPEN


1. Open the cover.
 2. Pull down the button to clear any previous code (or if you enter the wrong code).
 3. Enter your code.
 4. Rotate the dial 180° **clockwise** to open.
- The lid will now open, so you may retrieve the key.

Wrong Code: If the incorrect code has been entered and the dial is forced, the dial will rotate freely without opening. Reset the dial by rotating it back (**anti-clockwise**) to the locked position. The dial will reconnect to the locking mechanism.

Please push close the lid and the cover while using the key.

TO CLOSE

- A. Replace the key.
 - B. Close the lid.
 - C. Rotate the dial 180° **anti-clockwise** to lock.
- If the device has been locked correctly, you will hear a click.
Please close the the cover.

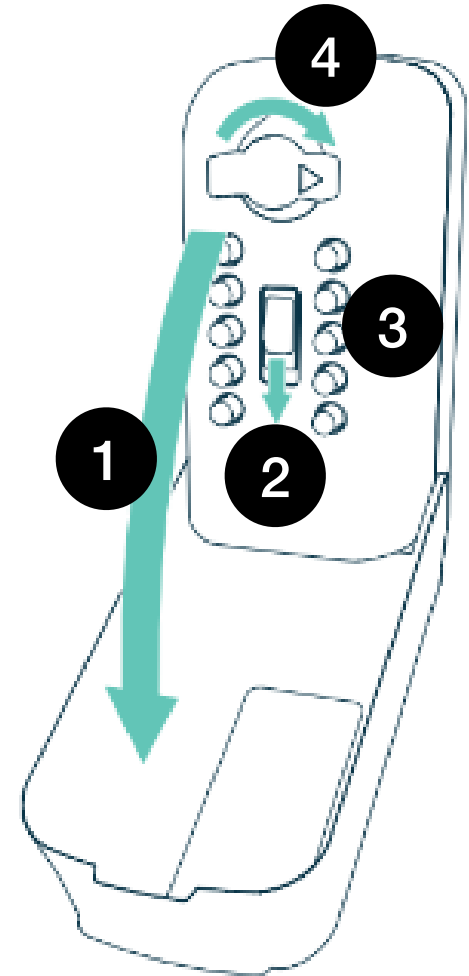

For assistance please call 01747 637001