



INSTRUCTION SHEET E

BARHAM ROOM AUDIO VISUAL EQUIPMENT

Please follow the instructions below to use the equipment correctly. Ensure you have appropriate leads to use with your equipment as these are not supplied.

Locate remote controls and input source


1. The remote controls for both the TV and the sound bar can be found in a holder inside the fireplace (right hand side). The input socket is to the right of the single power socket.



TV and Sound Bar Remote controls

Input socket (e.g. PC, DVD player or audio device)

Connect device

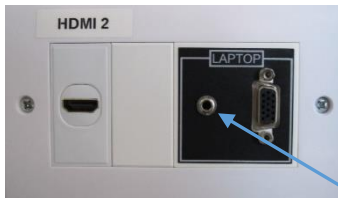


2. Connect your device using either an **HDMI cable** from a PC or disk player or a **VGA or audio cable** connected to your laptop.

3. If using the system for audio use only (e.g. ipod, ipad, MP3 player or mobile phone) connect via the laptop audio input socket using an audio lead.


Switch on screen and sound

4. The LG TV should be on standby already as it is plugged in above the screen. Use the remote control to turn on the TV screen and select the input source.

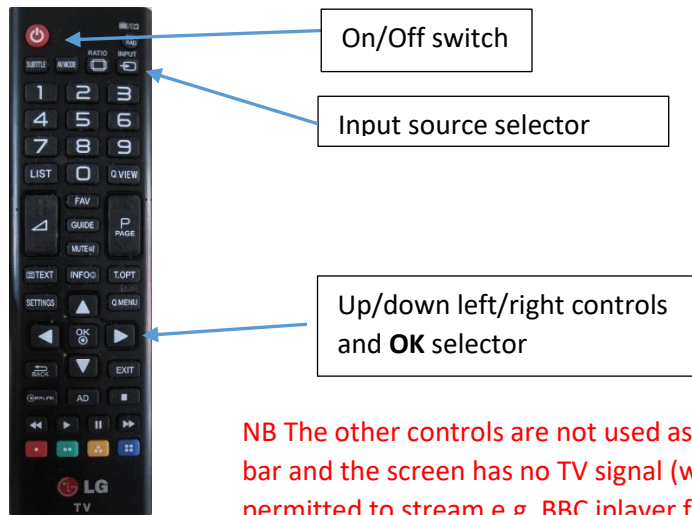

NB The other controls are not used as sound is controlled via the sound bar and the screen has no TV signal (we do have a TV licence so it is permitted to stream e.g. BBC iplayer from a laptop PC)

- The Yamaha sound bar is turned on using the smaller remote control or pressing the right hand on/off button on the front panel of the bar. The volume can be adjusted using the remote or the sound bar buttons

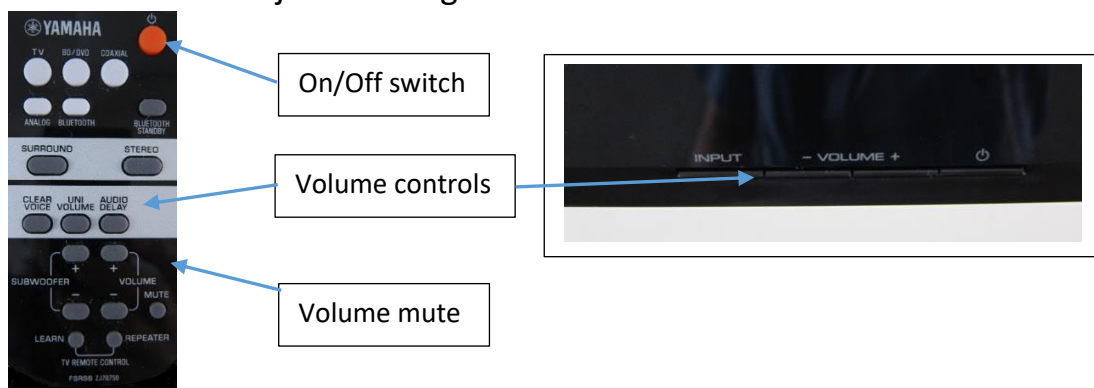

Select input source on TV

- Press the input source button on the TV remote to bring up the source selections on the screen (see **para 4**). This will display the last source used but can be changed using the **up/down left right** buttons then press OK to change the source. If the display goes off press the input button again.
- The only sources required are either **HDMI 2** if your device is connected to the *HDMI* input socket or **RGB** if connected to the *Laptop* input socket.



a) HDMI source selected



b) RGB source selected

Adjust computer resolution setting (if using laptop input)

8. Your PC screen resolution may need to be changed to 1920x1080 for optimum resolution. Right click anywhere on the PC desktop and select the *Screen Resolution* option from the menu to change.
9. You may also need to use the laptop function buttons (alt and f button) or the Windows key and P to direct the output to the TV screen. It will normally be best to select the option to **DUPLICATE** the laptop and TV screen.

Player Operation

10. Play your DVD/video which should appear on the screen if you have selected the correct input source (see **paras 6 /7**).
11. If playing audio only make sure you have selected the **RGB** source on the screen (see **image 7b**)

Volume adjustment

12. Adjust the volume either using the small Yamaha remote control or by pressing the **Volume +/- buttons** on the sound bar.

Close Down

13. Remove your laptop/input device and lead from the input socket
14. **Please remember to turn off the TV and sound bar using the remote controls and replace the latter in the holder under the fireplace.**

Audio lead



HDMI Lead



VGA lead

