
# HEATING TIMER INSTRUCTIONS

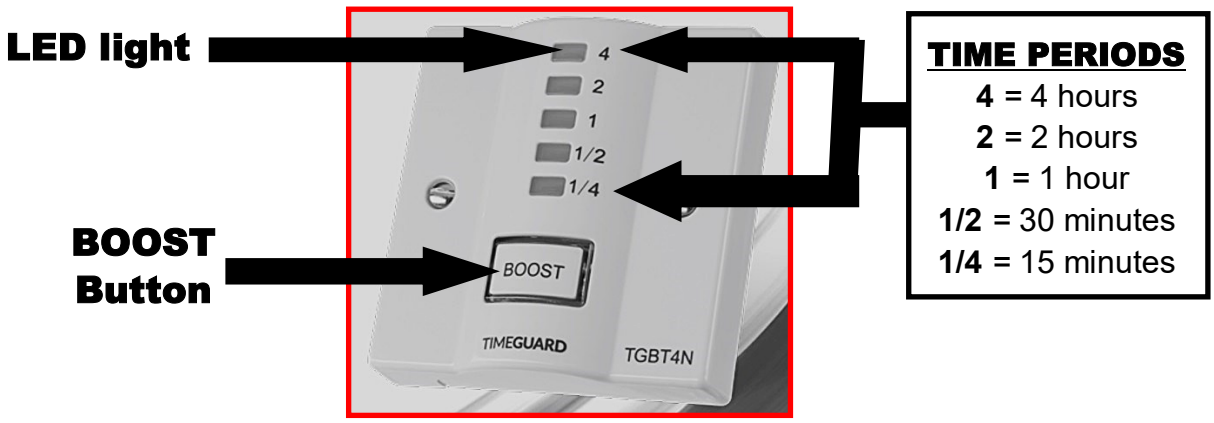


- Press the BOOST Button **ONCE** for *15 minutes*
  " " **TWICE** for *30 minutes*
  " " **THREE TIMES** for *1 hour*
  " " **FOUR TIMES** for *2 hours*
  " " **FIVE TIMES** for *4 hours*
- Press the BOOST button **SIX TIMES** to *reset the timer to zero*
- Once the time is set, the LEDs will go out to indicate the approximate time remaining.
- The LEDs will flash for **TWO minutes** before they go out.
  **EXAMPLE:** *if maximum of 4 hours is selected, the 4 hour LED will start flashing at 1 hour 58 minutes and then go out when it reaches 2 hours. After 58 minutes, the 2 hour LED will start flashing and then*

**TURN OFF ALL HEATING AT THE END OF YOUR BOOKING**

Failure to do so may result in you being charged at the billed electricity rate for the wasted energy.

**REPORT PROBLEMS WITH THE HEATING IMMEDIATELY**

**During opening hours (10AM - 1PM):** 01908 313602
**Out of hours:** communitycentre-help@newbradwell-pc.gov.uk